



Battery Air 150

Hints & Tips for Best Results

Air Stone:

- Replace the Air Stone every 6 months or when it shows signs of deterioration.
- If being used in salt water a plastic or ceramic air stone is recommended.

Trouble Shooting

PUMP DOES NOT WORK

1. Ensure switch is in the on position
2. Make certain the batteries are installed correctly.
3. Replace both batteries with new ones.
4. Check that the Air Line is not kinked
5. Check Air Stone and replace if needed.