



# Preset Heater

## 10W 25W 50W 100W

### Trouble Shooting

#### HEATER DOES NOT WORK

1. Ensure the plug is inserted correctly and the switch is in the on position.
2. Double check the thermometer. Use a second one.
3. Return the unit to the place of purchase for further inspection.