



Digital Auto Feeder

Tips

1. Use dry food only.
2. Keep the feeder away from splash/spray caused by airstones or filter outlets. Water will cause foods to clump and may prevent food from exiting the feeder.
3. Avoid high temperatures, they may cause feeder to malfunction.
4. Maintain the food level between Max and Min Level.
5. Should the feeder malfunction or batteries fail, Aqua One can not and will not be held accountable. Use of the feeder is at your own risk. Replace batteries if the LCD screen begins to fade or feeder rotates more slowly than usual.
6. Do not allow the unit to be submerged in water or become wet.
7. No loss of livestock can be claimed against the manufacturer for improper use.