




EC Hydro

Trouble Shooting

When the battery symbol  appears on the display, this indicates a low battery and only 2 hours of continuous use remain. Though the unit may continue to function, the accuracy of the unit will be affected beyond the 2 hours.

- If the unit fails to turn on, replace ALL batteries with new ones. Available from your supplying retailer.
- Do NOT mix new batteries with old ones. Dispose of old batteries safely.
- Change batteries according to instructions. Replace all four batteries according to polarity.