



Trouble Shooting

LOW WATER FLOW

1. Check strainer, impeller and impeller chamber for calcium buildup or other deposits or blockages.
2. Ensure all taps or flow control valves are fully open.
3. Clean plumbing lines to and from the pump.

NO WATER FLOW

1. Ensure all taps or flow control valves are fully open.
2. Check that maximum head height has not been exceeded. Consider all bends and horizontal plumbing when calculating head height.
3. Check impeller and shaft for damage.

PUMP IS NOISY

1. Ensure suction cups are correctly positioned.
2. Check for blockages on the pump inlet. Restriction of inlet can cause vibration.
3. Check for damage to impeller or shaft.

Maxi
101 102 103
104 105 106