



ProSkim Protein Skimmer

Trouble Shooting

SKIMMER ISN'T PRODUCING ENOUGH BUBBLES

1. Ensure air intake is attached firmly to the inlet of the pump.
2. Open air flow adjustor by turning clockwise.

SKIMMER IS COLLECTING NO WASTE

1. Ensure the water level is high enough. Adjust the outlet taps to raise water level.
2. Ensure sufficient air is entering the pump. Refer above for solution.
3. Ensure pump is running correctly. Check and clean the impeller.

COLLECTION CUP IS OVERFLOWING

1. Check airline drain. Replace if necessary.
2. Ensure water level is not too high in the skimmer. Waste exiting the skimmer should be coffee coloured. If the waste is very watery/ light in colour, lower water level adjusting the outlet taps.

SKIMMER IS LEAKING

1. Check o-ring at neck of skimmer and replace if necessary.

OUTLET OR INLET PIPES ARE LOOSE

1. Check o-rings at connections and replace if necessary.